

# **XX047 BATTERY REPLACEMENT INSTRUCTIONS**

- REMOVE BACKSIDE SCREWS
- REMOVE BACK BY LIFTING STRAIGHT UP, TAKING CARE NOT TO LOSE LANYARD ATTACHMENT.
- REMOVE BATTERY AND REPLACE USING CR2032 LITHIUM BATTERY, POSITIVE SIDE UP.
- REPLACE BACK AND SECURE WITH SCREWS.
- RESET TIME AND CALENDAR FUNCTIONS (OVER).

## **FEATURES:**

- 24-Hour Stopwatch
- Time-of-Day and Calendar
- Alarm Clock
- 12/24-Hour Time Option

## **STOPWATCH OPERATION**

Press **A** until you get to the stopwatch display.  
If necessary, press **B**, stop and **C** – reset to 0.

## **START/STOP TIMING**

**B**-Start, **B**-Stop.

(Repeatedly press **B** for Time-In/Time-Out timing)

**C**-Reset

## **SPLIT TIMING**

**B**-Start, **C**-Split

**C**-Release (Repeatedly press **C**, **C** for more split times)

**B**-Stop **C**, **C**-Reset

## **1-2 FAST FINISH**

**B**-Start, **C**-Stop #1.

**B**-Stop #2 (See record #1 time)

**C**-Release (See record #2 time)

**C**-Reset to 00

## **TIME/CALENDAR & ALARM DISPLAY**

Press **A** until you get Time Display

Hold **B** display Month, Date & Day

Hold **C** see Alarm Time

Hold **C** and Press **B** Alarm On/Off

(Alarm and Chime alarms will toggle ON and OFF)

## **TIME/CALENDAR SETTING**

Press **A** & hold 3 seconds – then press **A** once again to enter Set Mode.

Press **B** to select Seconds, Minutes, Hour

(A/P = 12-Hour. H = 24 Hour) Date, Month, Day

Press **C** to change any of the above

(Seconds only resets to 00)

Hold **C** to change digits rapidly

Press **A** to return to Time Display

## **ALARM SETTING**

Press **A** & hold 3 seconds to enter Set Mode

Press **B** to select Minutes or Hours

Press **C** to change Minutes or Hours

Press **A** to return to Time Display

## **TO SWITCH FROM 12 TO 24 HOURS**

in Normal Time Mode, press and hold down **C**, then press **A**.  
“A” or “P” will appear for AM/PM noting for 24 hour.

## **HOURLY CHIME SETTING**

Press **A** until you get Time Display

Hold **C** see Alarm Time and press **B**

Chime is ON when bell appears above display.

Chime is OFF when no bell appears.

Alarm is ON when symbol appears.

Alarm is OFF when no symbol appears.

## **ELECTRO LUMINESCENT LIGHT**

Press **D** EL Light will remain on for 3 seconds.

Hold **D** EL Light will remain on.

It will go off 3 seconds after you release the button.

## **BATTERY REPLACEMENT**

For best results, use one CR2032 or equivalent 3V silver oxide or alkaline battery.

## **CAUTION – Battery Safety Information**

- Non-rechargeable batteries are not to be recharged
- Rechargeable batteries must be removed before recharging
- Rechargeable batteries only to be recharged under adult supervision
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries
- Do not mix old and new batteries
- Exhausted batteries to be removed
- Do not dispose of battery in fire; battery may explode or leak
- Do not dispose of product in fire; battery may explode or leak