



POP 'N' WORK

PORTABLE POP-UP SHELTERS


GS Ground Tent setup instructions

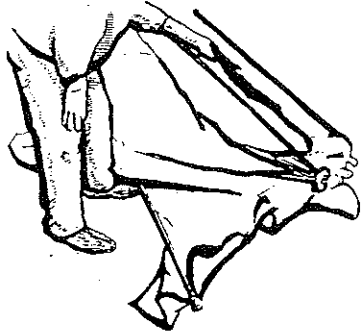


1. LIFT ROOF STRUT.
UNCOVER FIBERGLASS RODS.

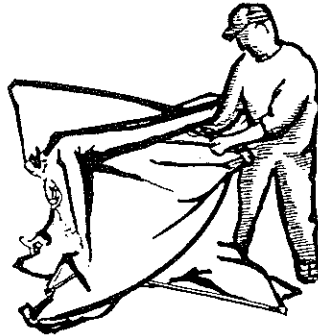


2. GRAB RODS CONNECTED TO
ROOF STRUTS-RAISE AND SPREAD.

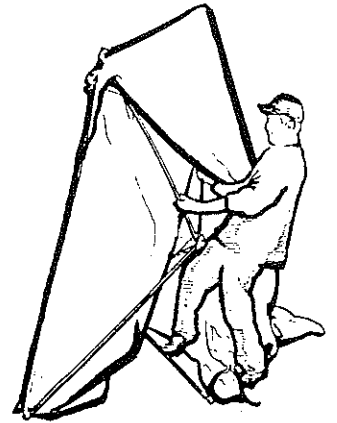


3. RAISE HIGH ENOUGH FOR
BOTTOM RODS TO SPREAD OUT
TENT SIDE.

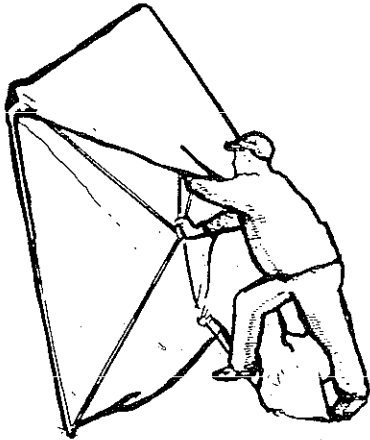


4. HOLD UPPER ROD WITH ONE
HAND-PUSH DISC OUT AND
DOWN WITH OTHER HAND.

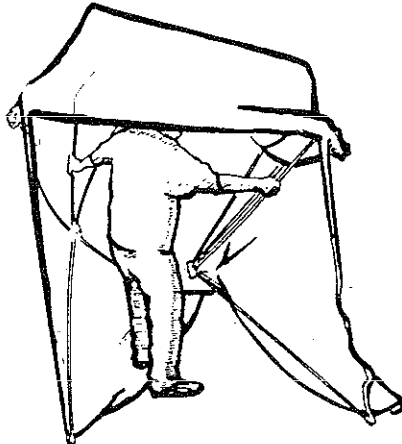


5. GRAB RODS CONNECTED TO ROOF
STRUTS-RAISE AND SPREAD.

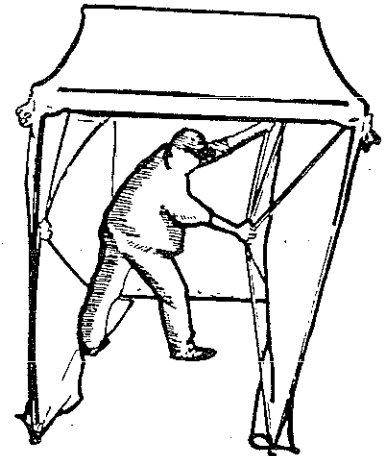

6. SPREAD LOWER LEGS
PUSH OUT AND DOWN

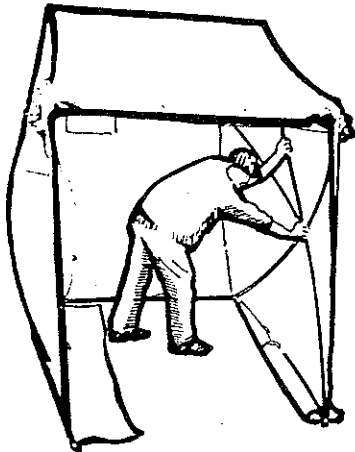


7. POP OUT SIDE

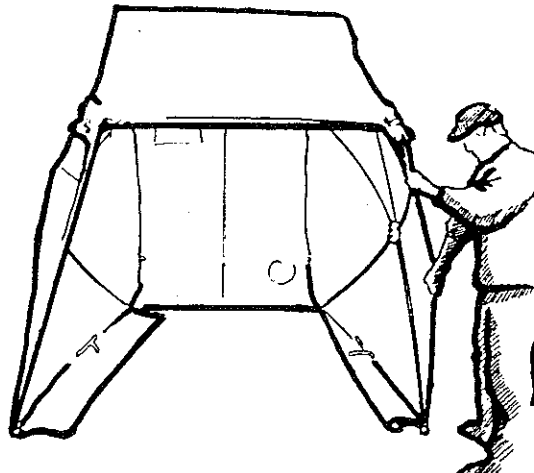

8. PLACE OVER CABINET OR WORK AREA.

CTs

 CREATIVE TENT SOLUTIONS INC
 1505 RACINE ST PO BOX 904
 DELAVAN WI 53115
 262 728 2686 FAX 262 728 5999
 E-MAIL: CTSTENTS@SBCGLOBAL.NET




Example tent is a GS 8623. All tents set up, and take down in this manner. Sometimes the larger tents are easier to set up from the outside of the tent using the ropes attached to the hub.


TENT TAKEDOWN INSTRUCTIONS




1. IF YOU ARE FOLDING DOWN AN FX STYLE TENT; PUSH THE RELEASE BUTTONS ON THE X-FRAME BEFORE MOVING TO STEP TWO.

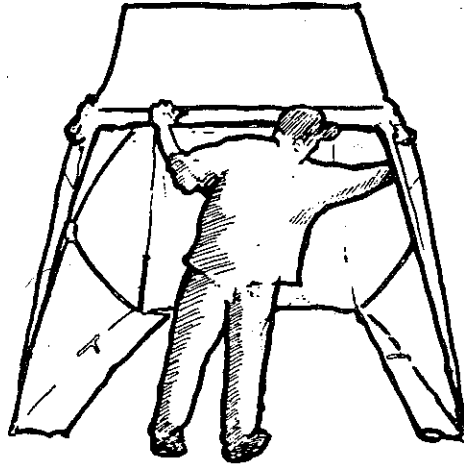


2. BRACE ROOF STRUT. PULL ON MIDDLE OF FIBERGLASS DIAGONAL ROD.

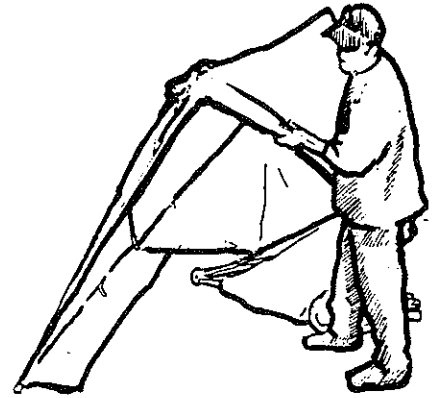


3. COLLAPSE SIDE FRAME. GUIDE DISC TOWARD BACK OF TENT.

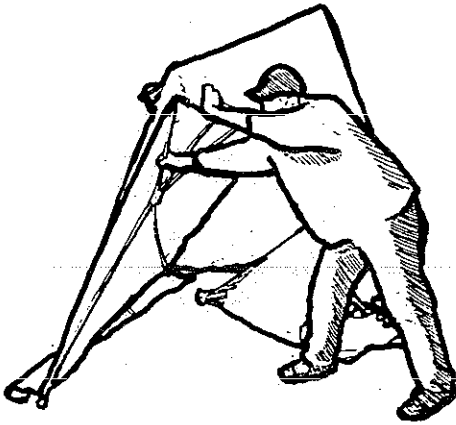

4. PULL ON MIDDLE OF FIBERGLASS ROD ON OPPOSITE SIDE.

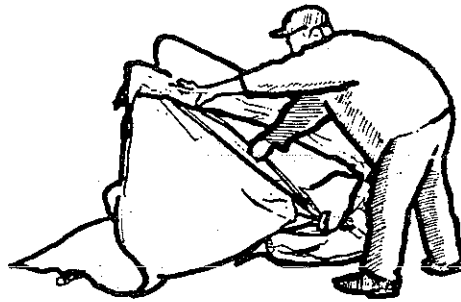


5. COLLAPSE SIDE. GUIDE RADIAL DISC TOWARD FRONT OF TENT.

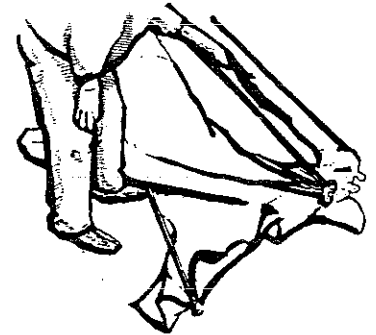

6. KEEP DISC OUT SIDE OF TENT ON THESE MODELS TO COMPLETE FOLD DOWN; GS 44, GS 64 AND GS 86.


SET-UP FROM OUTSIDE

1 SPREAD OUT THE RODS ON ONE SIDEWALL FRAME.

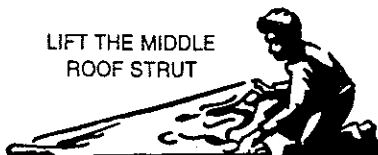


SPREAD OUT THE TWO GROUND STRUTS

2 LIFT THE MIDDLE ROOF STRUT AND PULL ON THE WINDLINE TO POP OPEN THE FRAME.

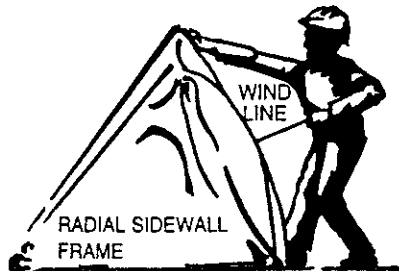

3 ON THE OTHER SIDE, LIFT THE ROOF STRUT AND PULL ON THE WINDLINE

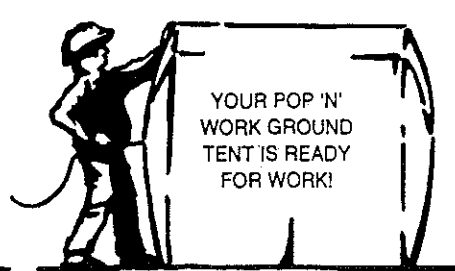

YOUR POP 'N' WORK GROUND TENT IS READY FOR WORK!